


ATTENTION

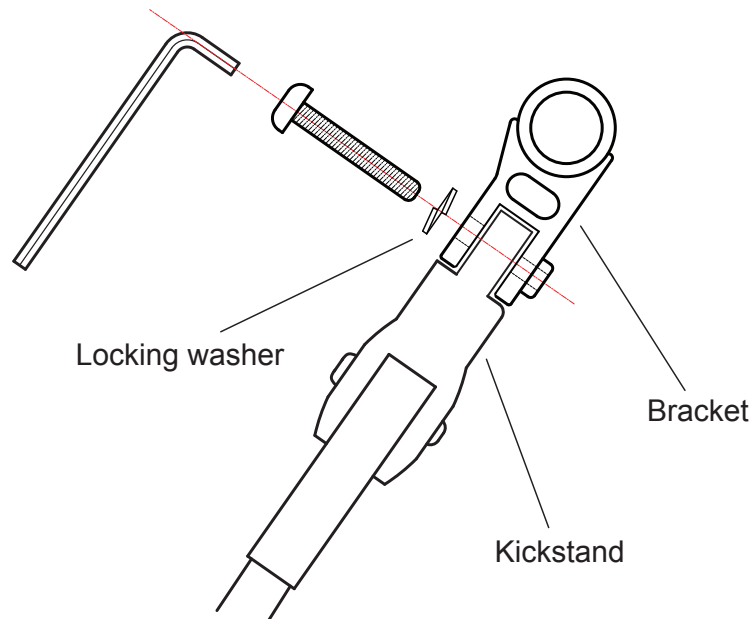

To install the kickstand follow the above illustration using a 3mm Allen key. Place the kickstand inside the bracket and tighten the included bolt and locking washer to 75-90Lbs/In.



IMPORTANT WARNING

Never ride your bike with unfolded kickstand. It may cause serious injuries. Always wear a helmet when riding your bike.

Maxarya Design and Manufacturing Inc. Concord, Canada www.maxarya.com
