


ATTENTION

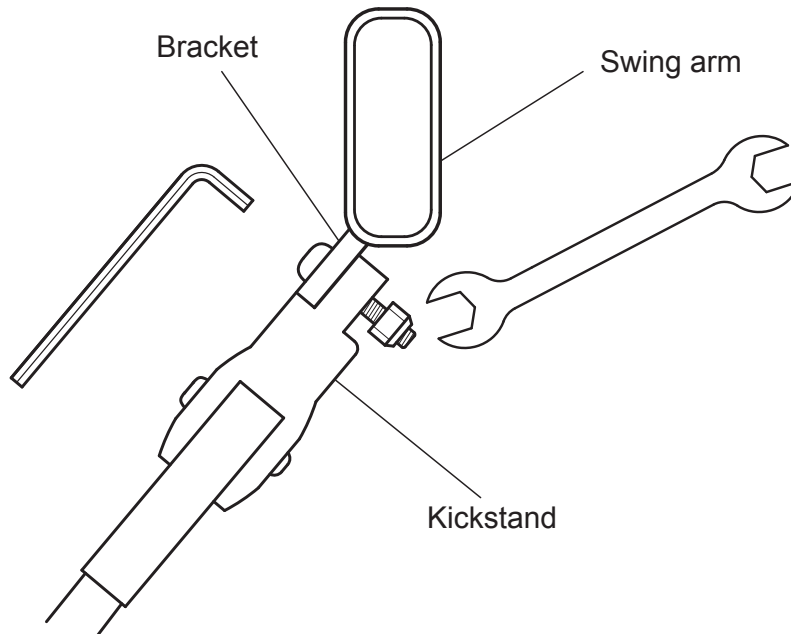

To install the kickstand follow the above illustration using a 3mm Allen key and 8mm wrench. Place the kickstand under the swing arm bracket and tighten the included bolts and nut to 75-90Lbs/In.

IMPORTANT WARNING

Never ride your bike with unfolded kickstand. It may cause serious injuries. Always wear a helmet when riding your bike.

Maxarya Design and Manufacturing Inc. Concord, Canada www.maxarya.com
